More info at: www.woodwindexpert.com +45 3535 8643

Conn				
Instrument	Model	Year	Start No.	Ending No
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1957		652002
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1958		718696
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1959		779657
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1960		834200
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1961		898556
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1962	ort (949465
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1963		C 00501
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1964		C 73854
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1965		E 54106
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1966		H 31247
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1967		K 35274
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1968		L 20454

Or at Lohff & Pfeiffer USA LLC: <u>www.lpwindsusa.com</u> <u>info@lpwindsusa.com</u> +1 812

More info at: www.woodwindexpert.com +45 3535 8643

A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1969		M+Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1970	52000	N+Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1971		P+Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1972		R+Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1973		Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1974		Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1975	630000	Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1976		Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1977		Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1978		Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1979		Code
A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1980	7850000	Code

Or at Lohff & Pfeiffer USA LLC: <u>www.lpwindsusa.com</u> <u>info@lpwindsusa.com</u> +1 812

More info at: www.woodwindexpert.com +45 3535 8643

A & Bb-clarinet	Pan America When Code is used is the 1 Letter the decade G=70 H = 80 2.Charac.=Month 3char.single year than prod.Number than L=lowpitch 440	1983	875000	Code
Saxophone		1977		91314
Saxophone		1978		98993
Saxophone		1979		111821
Saxophone		1980		128692
Saxophone		1981		145002
Saxophone		1982		154954
Saxophone		1983		170074
Saxophone		1984		184337
Saxophone		1985		201208
Saxophone		1986		221244
Saxophone		1987		240142
Saxophone		1988		261466
Saxophone	All Reedinstruments	1895	1	
Saxophone	All Reedinstruments	1896	2000	
Saxophone	All Reedinstruments	1897	2500	
Saxophone	All Reedinstruments	1898	3000	
Saxophone	All Reedinstruments	1899	3500	YATA
Saxophone	All Reedinstruments	1900	3900	JUII
Saxophone	All Reedinstruments	1901	4400	
Saxophone	All Reedinstruments	1902	5100	
Saxophone	All Reedinstruments	1903	6700	
Saxophone	All Reedinstruments	1904	8500	
Saxophone	All Reedinstruments	1905	9600	
Saxophone	All Reedinstruments	1906	10800	
Saxophone	All Reedinstruments	1907	12000	
Saxophone	All Reedinstruments	1908	13000	
Saxophone	All Reedinstruments	1909	15400	
Saxophone	All Reedinstruments	1910	17800	
Saxophone	All Reedinstruments	1911	21200	
Saxophone	All Reedinstruments	1912	22500	
Saxophone	All Reedinstruments	1913	25000	
Saxophone	All Reedinstruments	1914	30000	
Saxophone	All Reedinstruments	1916	35000	
Saxophone	All Reedinstruments	1917	40000	
Saxophone	All Reedinstruments	1919	50000	
Saxophone	All Reedinstruments	1920	58000	

Or at Lohff & Pfeiffer USA LLC: <u>www.lpwindsusa.com</u>

info@lpwindsusa.com

More info at: www.woodwindexpert.com +45 3535 8643

Cayanhana	All Doodington and	1021	C4000	I
Saxophone	All Reedinstruments	1921	64000	
Saxophone	All Reedinstruments	1922	83000	
Saxophone	All Reedinstruments	1923	101755	
Saxophone	All Reedinstruments	1924	124600	
Saxophone	All Reedinstruments	1925	145400	
Saxophone	All Reedinstruments	1926	107900	
Saxophone	All Reedinstruments	1927	193450	
Saxophone	All Reedinstruments	1928	209250	
Saxophone	All Reedinstruments	1929	224600	
Saxophone	All Reedinstruments	1930	237800	
Saxophone	All Reedinstruments	1931	244700	
Saxophone	All Reedinstruments	1932	249230	
Saxophone	All Reedinstruments	1933	256501	
Saxophone	All Reedinstruments	1934	260000	
Saxophone	All Reedinstruments	1935	263500	
Saxophone	All Reedinstruments	1936	271000	
Saxophone	All Reedinstruments	1937	278000	
Saxophone	All Reedinstruments	1938	284000	
Saxophone	All Reedinstruments	1939	285000	
Saxophone	All Reedinstruments	1940	288300	OM
Saxophone	All Reedinstruments	1941	295250	101
Saxophone	All Reedinstruments	1942	304500	
Saxophone	All Reedinstruments	1943	309250	
Saxophone	All Reedinstruments	1944	309300	
Saxophone	All Reedinstruments	1945	310200	
Saxophone	All Reedinstruments	1946	314000	
Saxophone	All Reedinstruments	1947	320000	
Saxophone	All Reedinstruments	1948	327150	
Saxophone	All Reedinstruments	1949	332150	
Saxophone	All Reedinstruments	1950	337250	
Saxophone	All Reedinstruments	1951	341850	
Saxophone	All Reedinstruments	1952	341851	
Saxophone	All Reedinstruments	1953	354742	
Saxophone	All Reedinstruments	1954	359251	
Saxophone	All Reedinstruments	1955	500001	
Saxophone	All Reedinstruments	1956	571750	
Saxophone	Made in Mexico?	1976		83000

In that periodfrom 1958-1968 are 29% english hons.

More info at: www.woodwindexpert.com info@woodwindexpert.com +45 3535 8643

www.woodwindexpert.com

Or at Lohff & Pfeiffer USA LLC: <u>www.lpwindsusa.com</u> <u>info@lpwindsusa.com</u> +1 812