

Lohff & Pfeiffer

More info at: www.woodwindexpert.com info@woodwindexpert.com +45 3535 8643

Yanagisawa					
Yanagisawa	Instrument	Model	Year	Start No.	Ending No
Yanagisawa	Saxophone		1972	12720000	12729030
Yanagisawa	Saxophone		1973	12790310	12731254
Yanagisawa	Saxophone		1974	12731255	12745400
Yanagisawa	Saxophone		1975	12745401	12753382
Yanagisawa	Saxophone		1976	12753383	12764553
Yanagisawa	Saxophone		1977	12764554	12775790
Yanagisawa	Saxophone		1978	12775791	12781317
Yanagisawa	Saxophone		1979	12781318	12791801
Yanagisawa	Saxophone		1980	12791802	00102143
Yanagisawa	Saxophone		1981	00102144	00106981
Yanagisawa	Saxophone		1982	00106982	00111892
Yanagisawa	Saxophone		1983	00111893	00117142
Yanagisawa	Saxophone		1984	00117143	00122663
Yanagisawa	Saxophone		1985	00122664	00128485
Yanagisawa	Saxophone		1986	00128486	00134903
Yanagisawa	Saxophone		1987	00134904	00141658
Yanagisawa	Saxophone		1988	00141659	00148774
Yanagisawa	Saxophone		1989	00148775	00156006
Yanagisawa	Saxophone		1990	00156007	00162968
Yanagisawa	Saxophone		1991	00162969	00170073
Yanagisawa	Saxophone		1992	00170074	00177116
Yanagisawa	Saxophone		1993	00177117	00184318
Yanagisawa	Saxophone		1994	00184319	00189050
Yanagisawa	Saxophone		1995	00189051	00197400
Yanagisawa	Saxophone		1996	00197401	00205400
Yanagisawa	Saxophone		1997	00205401	00213000
Yanagisawa	Saxophone		1998	00213001	00219500
Yanagisawa	Saxophone		1999	00219501	00228250
Yanagisawa	Saxophone		2000	00228251	00235000

*No definit data could be found. The years are just estimats.

Or at Lohff & Pfeiffer USA LLC: www.lpwindsusa.com info@lpwindsusa.com +1 812 929 5556